


MODEL 203, 209

Shown on model 203.0

- 1 Engine hood cable
- 2 Cap
- 3 Bolts
- 4 Cover below instrument panel on left
- 5 Bolt
- 6 Release
- X11/4 Data link connector
- X30/6 Cockpit voltage distributor (CAN) connector

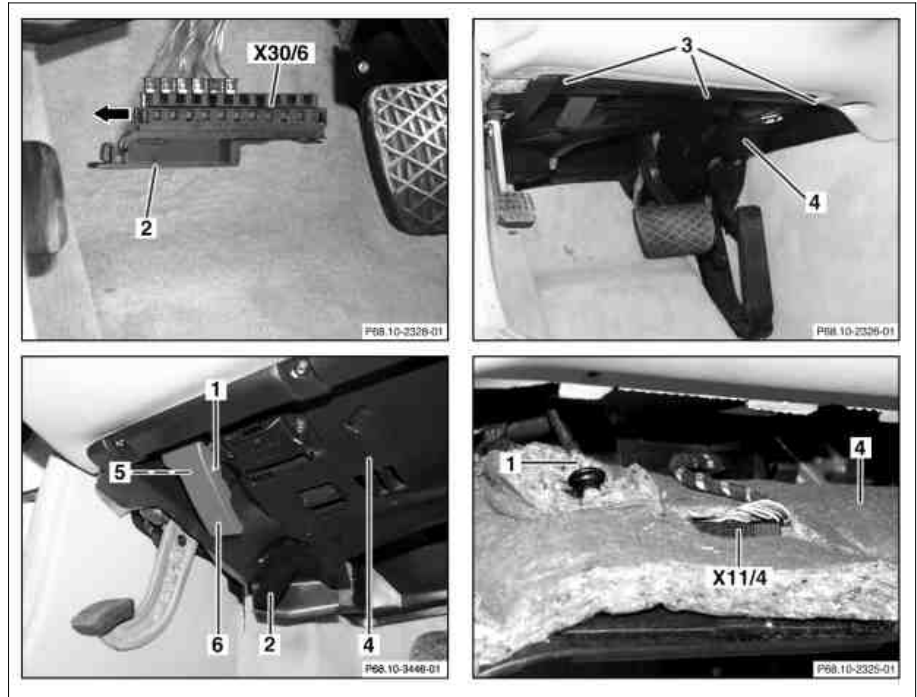

P68.10-3447-06

☒ ☒	Remove/Install		
1	Unclip cap (2) with potential distributor (CAN) cockpit connector (X30/6) from cover below left instrument panel (4)		
2	Unclip potential distributor (CAN) cockpit connector (X30/6) from cap (2) and guide through cover below left instrument panel (4)		
3	Unscrew bolt (5) from release (6) of engine hood cable (1)		
4	Loosen release (6) from cover below left instrument panel (4) and guide through cover below left instrument panel (4)		
5	Remove bolts (3)		
6	Fold down cover below instrument panel (4) on left		
7	Release data link connector (X11/4) and disconnect		
8	Remove cover below instrument panel (4) on left.	i Installation: Ensure that air ducting is seated properly.	
9	Install in the reverse order		